


## **Z-Bracket Kit**

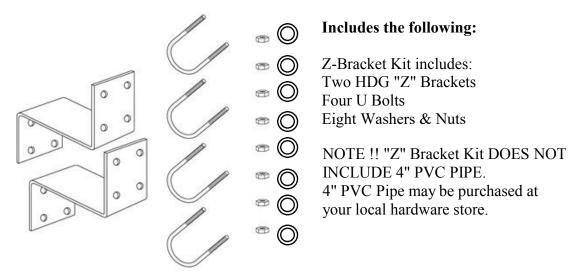

Z Bracket Kit needs to installed above flood level

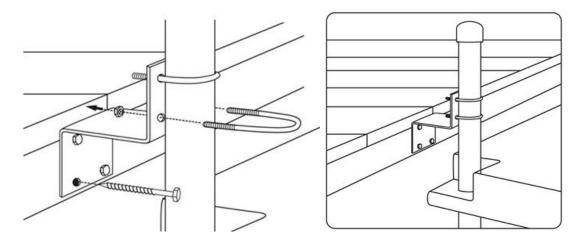

Recommended hardware: four 1/2 lag screws and four 1/2 washers that are Hot Dipped Galvanized

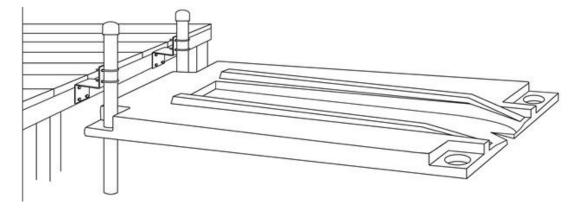

4" PVC Pipe needs to be AT LEAST 18" Below The Watercraft Float